


SOFTOP & HARDTOP


TOYOTA

LAND CRUISER FJ40L SERIES

MODEL IDENTIFICATION

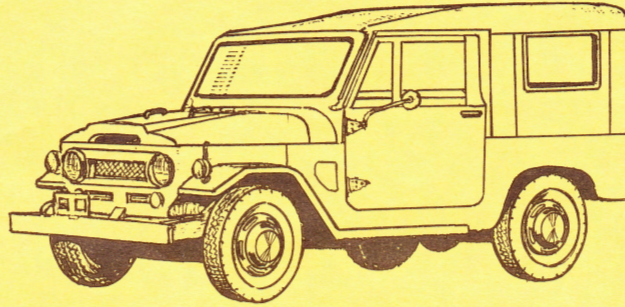

SOFT TOP

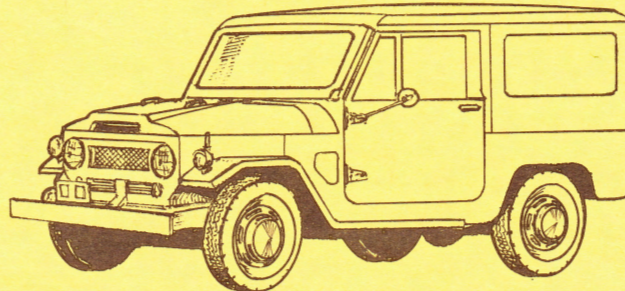

HARD TOP

SPECIAL NOTE

TO ASSURE YOUR RECEIVING CORRECT PARTS when ordering from your Toyota dealer, PLEASE SPECIFY MODEL and SERIAL numbers of vehicle.

SUGGESTED PRICE PROCEDURE

Prices listed here are Factory suggested list prices. They are not intended to be construed as determinative of the price you or any dealer will charge on resale. Therefore, we suggest that the purchaser (of parts listed here) check with your local dealer and establish the necessary procedure to cover your reasonable profit.

PARTS INFORMATION IS COURTESY OF

Toyota Motor Distributors, Inc.

2055 W. 190 St.

Torrance, California 90501

SOFTOP & HARDTOP


TOYOTA

10-3

LAND CRUISER FJ40L SERIES

FRAME & BUMPERS

TYPICAL

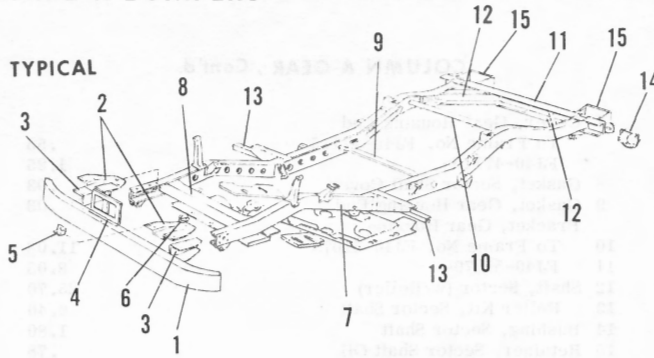

FRONT BUMPER

REFINISH BUMPER .8

1 Face Bar	.5	43.93
Optional (Chrome)	.5	48.55
Gusset or Bracket, Bar		
2 Upper	(2)	1.73
3 Lower	.2	2.28
4 Bracket, License Plate		3.70
5 Guide, Starting Handle (Opt.)		.23
6 Hook, Traction	(2)	2.20

FRAME

7 Frame Assy. *		
To 5-69	#25.0	258.36
6-69 To 9-69	#25.0	248.72
10-69-	#25.0	248.72
(# Time includes R&R of assys. Does not include O/H any assy.)		
(* Includes items 8 thru 12)		
Crossmember, Frame		
8 Front	# 2.5	18.30
(# w/Grille shell assy. & nec. steering assy. rem.)		
9 No. 2		12.18
No. 3 To 11-68*		-
10 Rear Shock Support		15.23
11 Rear	# 3.0	18.03
(# w/Rear bumper assy. rem. Incl. loosen body at rear)		
12 Rear Diagonal	R.H.	2.93
	L.H.	-
(* Not illustrated)		
13 Stay, Step-Up	(2)	7.13
14 Bracket, Rear Turn Signal Lamp		
To 11-68	(2)	2.60
12-68-	.2	1.18

REAR BUMPER

REFINISH BUMPER

ONE	.4
BOTH	.6

15 Bumper Bar	.3	6.95
Optional (Chrome)	.3	18.08


FRONT SUSPENSION

R&R DOES NOT INCL.
ADJUST TOE-IN .5

SPECIFICATIONS:


Toe-In	3-5mm
Caster	1°
Camber	1°
Axis Inclination	9°30'

TYPICAL

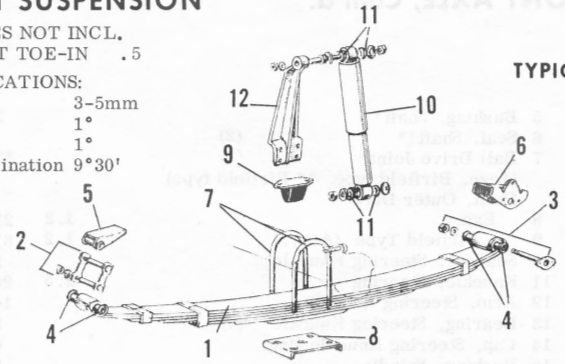


1 Spring, Front	1.1	50.38
2 Shackle Kit, Front	.6	4.13
3 Pin Kit, Rear		2.83
4 Bushing, Spring	(4)	.23
Bracket, Spring Hanger		
5 Front		1.83
6 Rear		1.83
7 U-Bolts, Spring	.2	2.05
8 Seat, Spring U-Bolt		1.10
9 Bumper, Spring Rubber	.3	2.55
10 Shock Absorber	.5	13.38
11 Bushing, Shock	(8)	.15
12 Bracket, Shock Upper		6.58


FRONT AXLE

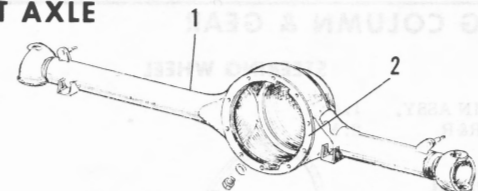

EXC. BIRFIELD TYPE

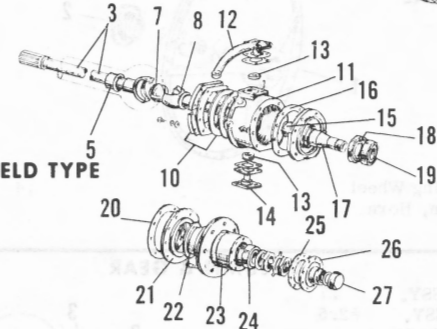

BIRFIELD TYPE

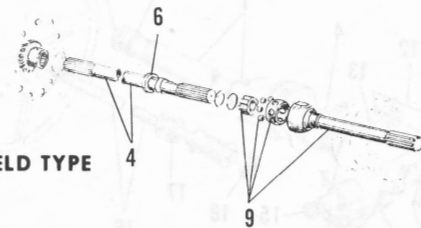

1 Housing, Axle	8.0	129.62
2 Gasket, Housing to Carrier		.78
Shaft, Axle Inner		
3 Exc. Birfield Type		
To Frame No. FJ40-53492	R.H.	1.7 30.98
	L.H.	1.7 38.05
From Frame No. FJ40-53493	R.H.	1.2 29.63
	L.H.	1.2 36.58
4 Birfield Type	R.H.	1.2 29.63
	L.H.	1.2 36.58

Cont'd.

LAND CRUISER FJ40L SERIES

10-3

TOYOTA

SOFTOP & HARDTOP

FRONT AXLE, Cont'd.

5	Bushing, Shaft*		2.70
6	Seal, Shaft**	(2)	.88
7	Ball Drive Joint*	(2)	12.90
	(*exc. Birfield type, ** Birfield type)		
	Shaft, Outer Drive		
8	Exc.	1.2	21.70
9	Birfield Type (Assy.)	1.2	61.13
10	Seal Set, Steering Knuckle		2.60
11	Knuckle, Steering	2.5	26.80
12	Arm, Steering Knuckle		14.38
13	Bearing, Steering Knuckle	(4)	3.88
14	Cap, Steering Knuckle Brg.		6.48
15	Bushing, Spindle		2.48
16	Gasket, Knuckle to Spindle		.03
17	Spindle, Steering Knuckle	1.3	28.43
18	Seal, Spindle Oil		1.28
19	Bearing, Spindle Inner	1.0	12.15
20	Gasket, Knuckle Oil Retainer		.03
21	Retainer, Knuckle Oil		1.73
22	Seal, Hub Dust		.73
23	Hub, Front Axle	1.3	22.05
24	Bearing, Spindle Outer		6.10
25	Gasket, Shaft Flange		.03
26	Flange, Outer Shaft		6.48
27	Cap, Shaft Grease		.15

STEERING COLUMN & GEAR, Cont'd.

COLUMN & GEAR, Cont'd.


7	Cover, Gear Housing End		
	To Frame No. FJ40-47115		.55
	FJ40-47116-		1.25
8	Gasket, Sector Shaft Cover		.03
9	Gasket, Gear Housing End		.03
	Bracket, Gear Housing		
10	To Frame No. FJ40-51078	11.08	
11	FJ40-51079-	8.05	
12	Shaft, Sector (w/Roller)	25.70	
13	Roller Kit, Sector Shaft	6.40	
14	Bushing, Sector Shaft	1.80	
15	Retainer, Sector Shaft Oil	.78	
16	Tube & Worm (Main Shaft)	21.83	
17	Bearing, Shaft Upper	3.30	
18	Lower	3.88	

STEERING COLUMN & GEAR

STEERING WHEEL

R&R COLUMN ASSY.	1.4
O/H INCL. R&R	2.1


TYPICAL

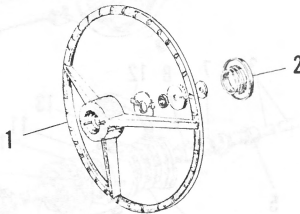

1	Steering Wheel	.4	26.45
2	Button, Horn		5.08

COLUMN & GEAR

R&R GEAR ASSY.	.7
O/H GEAR ASSY.	#2.5
(#INCLUDES R&R)	

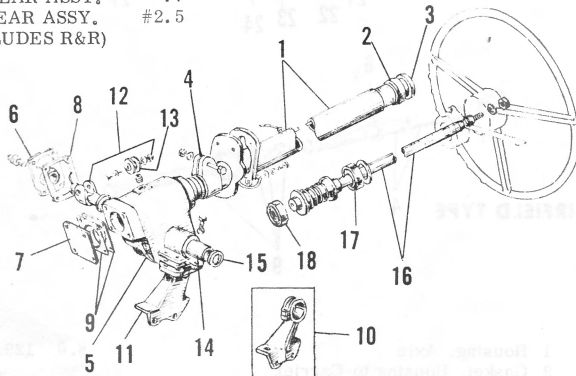


Post Assy., Steering*	51.91
(*Includes items 1 thru 3, 5 thru 9, 12 thru 18)	
1 Tube, Column (w/Insul.)	8.68
2 Insulator, Column Upper	2.13
3 Bushing, Column Upper	.38
4 Clamp, Column Lower	
w/Floor Shift	.25
5 Housing, Gear	12.55
6 Cover, Sector Shaft	2.45

Cont'd.

STEERING LINKAGE

R&R DOES NOT INCL.
ADJUST TOE-IN .5

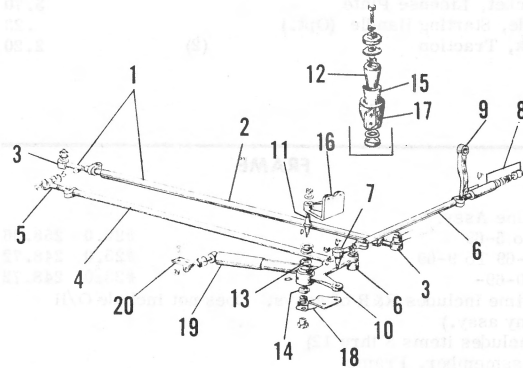

1	Rod Assy., Tie*	.5	20.75
(*Includes items 1 & 2)			
2	Rod, Tie		10.50
3	End Assy., Tie Rod		
	To Frame No. FJ40-24208	R.H.	.5 9.88
		L.H.	.5 7.98
	FJ40-24209-	R.H.	.5 11.15
		L.H.	.5 8.55
4	Rod, Relay	.4	5.48
5	End Assy., Relay Rod	.3	8.05
6	Drag Link, Steering	.4	7.13
	End Assy., Drag Link		
7	Front	#	7.98
8	Rear	#	13.90
(#One .3, both .4)			
9	Arm, Pitman	.5	9.50
10	Arm, Steering Center	.4	16.45
	Shaft, Center Arm		
11	To 5-69	.4	7.80
12	6-69-	.4	13.53
	Bearing, Center Arm Shaft		
13	To 5-69 Upper		6.33
14	Lower		6.43
15	Bushing, Center Arm Shaft		6.95
	6-69-		
	Bracket, Center Arm Shaft		
16	To 5-69	1.0	3.03
17	6-69-	1.0	10.98
18	Support, Center Arm Shaft		
	To 5-69	.3	1.18
19	Damper, Shimmy	.6	24.25
20	Bracket, Damper	.3	2.05

SOFTOP & HARDTOP


TOYOTA

10-3

LAND CRUISER FJ40L SERIES

WHEELS & BRAKES


FRONT HUB & WHEEL

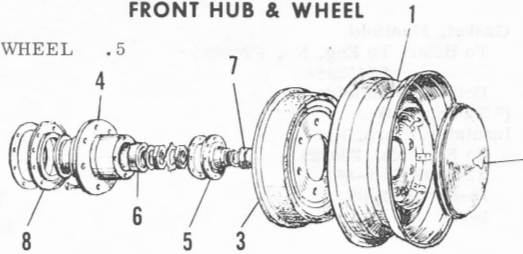

REFINISH WHEEL .5


1 Wheel 15" w/o Cap Retainers	.3	24.73
15" w/Cap Retainers	.3	27.25
16" For 700 x 16 Tire	.3	33.65
16" For 750 x 16 Tire	.3	38.09
2 Cap, Wheel Hub		8.83
3 Drum, Brake	1.0	17.55
4 Hub, Front Axle	1.0	22.05
5 Flange, Axle Outer Shaft		6.48
Bearing, Spindle Inner*	#	12.15
Bearing, Spindle Outer	#	6.10
(# R&R Inner & outer 1.0)		
(* Not illustrated - see item 19 in front axle)		
7 Cap, Wheel Grease		.15
8 Retainer, Spindle Oil		1.73

FRONT BRAKES

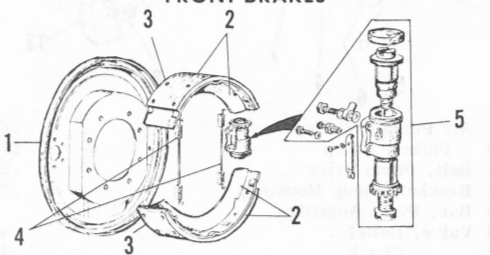

1 Plate Backing	(2)	# 1.9	5.95
(#Includes bleed brake.)			
2 Shoe w/Lining	(4)	.8	3.55
3 Lining, Shoe	(4)		2.13
4 Spring, Shoe Return	(4)		.48
5 Cylinder, Wheel	(2)	.9	9.58
Kit, Cylinder (Complete)		# 1.2	1.75
(#Includes R&I cylinder. Does not include bleed.)			
Kit, Cylinder (Cups)			.85
Hose, Brake	(2)	#.3	3.08
(#Each add'l. .2. Does not include bleed brakes.)			

REAR BRAKES

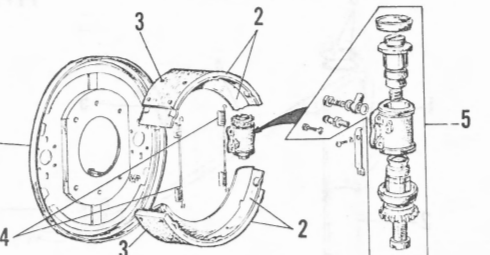


1 Plate, Backing	(2)	# 1.7	10.13
(#Includes bleed brakes.)			
2 Shoe w/Lining	(4)	.8	3.55
3 Lining, Shoe	(4)		2.13
4 Spring, Shoe Return	(4)	.6	.48
5 Cylinder, Wheel Front		.9	8.90
Rear		.9	8.90
Kit, Cylinder (Complete)		# 1.2	1.98
(#Includes R&R Assy. Does not include bleed.)			
Kit, Cylinder (Cups)			1.25
Hose, Brake		#.3	3.55
(#Each add'l. .2. Does not include bleed brakes.)			

Cont'd.

WHEELS & BRAKES, Cont'd.


MASTER CYLINDER

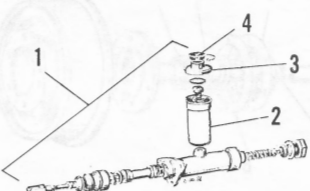

1 Master Cylinder Assy.	1.2	14.00
Kit, Cylinder (Complete)	# 1.8	4.20
(#Includes R&R cylinder Assy.)		
Kit, Cylinder (Cups)		.25
2 Reservoir Set, Cylinder*		1.88
(* Includes items 3 & 4.)		
3 Cap, Reservoir Main		.30
4 Cap, Reservoir Filler		.15

REAR SUSPENSION


TYPICAL

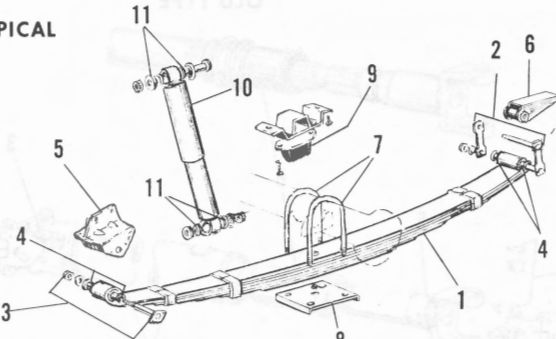

1 Spring, Rear	(2)	1.1	48.24
2 Shackle Kit, Spring		.6	5.00
3 Pin Kit, Spring			
Exc.		.6	2.83
w/Std. (Coarse) Thread		.6	1.73
4 Bushings, Spring	(8)		.23
Bracket, Spring Hanger			
5 Front			3.70
6 Rear	(2)		4.05
7 U-Bolts, Spring	(4)	.4	1.88
8 Seat, Spring U-Bolt		.6	1.10
9 Bumper, Spring Rubber			2.55
10 Shock Absorber	(2)	.4	13.38
11 Bushing, Shock			.15

REAR AXLE

R&I AXLE ASSY.	1.8
O/H AXLE ASSY.	4.4

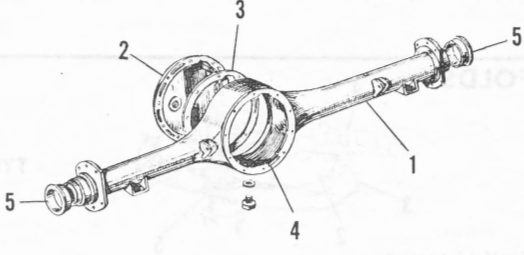

1 Housing, Axle	4.0	94.31
2 Cover, Inspection		4.05
3 Gasket, Inspection Cover		.63
4 Carrier Housing		.78
5 Collar, Housing Side	(2)	.33

Cont'd.


SOFTOP & HARDTOP

TOYOTA

10-3


LAND CRUISER FJ40L SERIES

EXHAUST, Cont'd.

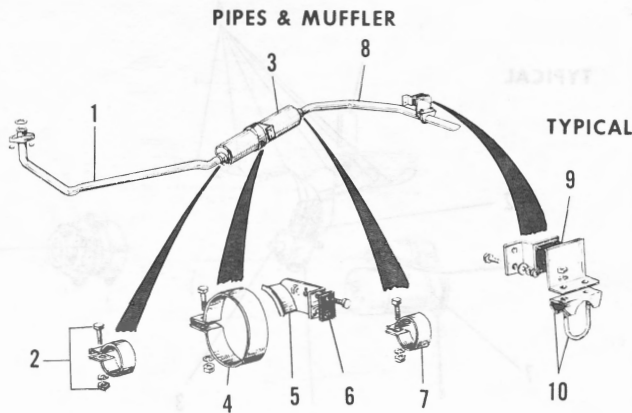


1 Pipe, Exhaust	To 8-68	.6	13.10
2 Clamp Pkg., Exhaust Pipe	9-68-	.6	8.68
3 Muffler		.5	12.95
4 Clamp, Muffler			.45
5 Bracket, Muffler Support		.2	1.03
6 Insulator (Cushion), Brkt.			.40
7 Clamp, Muffler To Tail Pipe			.30
8 Tail Pipe		.4	4.75
9 Support, Tail Pipe Rear			3.55
10 U-Bolt Clamp			.60

FUEL, Cont'd.

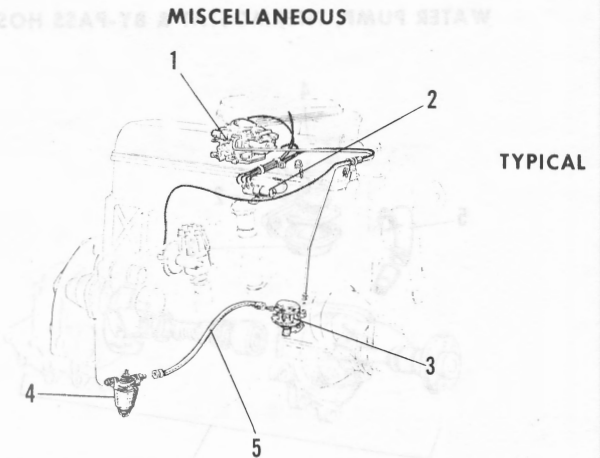

1 Carburetor Assy.	To 2-69	#	.8	47.31
	3-69-	#	.8	76.50
(# Includes adjust idle & mixture)				
2 Valve, Vacuum Switching	To 11-68		.3	43.85
	12-68-		.3	45.36
3 Fuel Pump			.5	18.58
4 Filter, Fuel			.3	3.10
5 Hose, Pump To Filter				4.73

FUEL

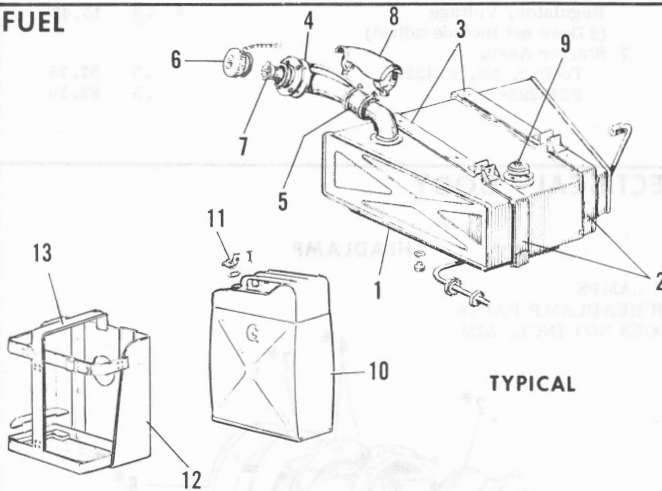


1 Tank, Fuel	To 8-69	.6	33.65
	9-69-	.6	39.88
Band (Strap), Tank Mounting			
2 Front	(2)	.5	1.28
3 Rear	(2)	.5	.73
4 Pipe, Filler			2.98
w/o Strainer			4.50
w/Strainer			1.05
5 Hose, Filler Pipe Joint		.3	
6 Cap, Fuel Filler			1.00
Std.			
Locking	To 1-70 - Not Available		4.05
	2-70-		2.05
7 Strainer, Fuel		.3	
8 Cover, Filter Pipe			5.75
9 Gauge, Tank Unit		.5	18.18
Tank, Expansion*		.6	26.70
Case, Vapor Storage*		.3	.65
Valve, Tank Breather*			
(* From 9-69- w/case storage system. Not illustrated.)			
10 Tank, Fuel Auxiliary			25.18
11 Cap, Aux. Tank			6.70
12 Bracket, Aux. Tank			10.98
13 Band, Aux. Tank			1.25

Cont'd.

COOLING

RADIATOR & FAN ASSY.

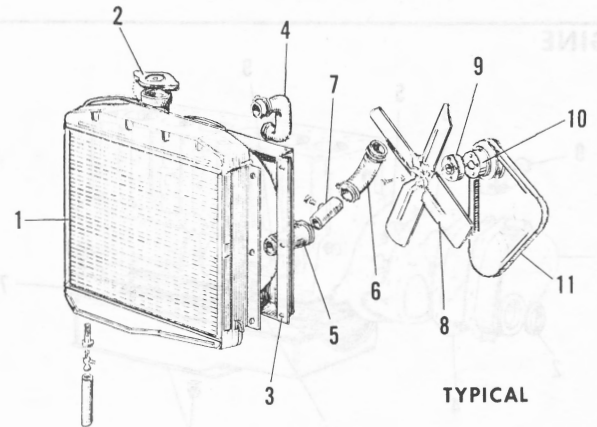

1	Radiator		.6	110.18
2	Cap, Filler			3.25
3	Shroud, Fan			14.88
4	Hose, Radiator Upper	#		3.65
	Hose, Radiator Lower			
5	Front	#		2.80
6	Rear	To Eng. No. F243297	#	1.70
	F243298-		#	3.40
	(# R&R one .3, two .4, three .5)			
7	Pipe, Lower Hose			4.40
8	Fan Blade	#	.4	2.83
	(# exc. w/Radiator removed .2)			
9	Spacer, Fan	To 12-68		1.48
10	Pulley, Fan		#	1.90
	(# Use fan time)			
11	Belt, Fan			
	To Eng. No. F243297		.2	3.50
	F243298-		.2	3.30

Cont'd.

FOREIGN COLLISION ESTIMATOR GUIDE

LAND CRUISER FJ40L SERIES


10-3

TOYOTA

SOFTOP & HARDTOP

COOLING, Cont'd.


WATER PUMP, THERMOSTAT & BY-PASS HOSE

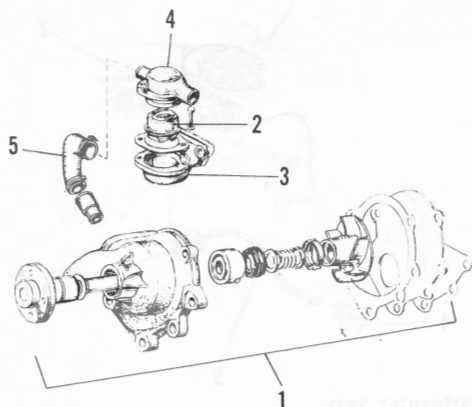

1 Pump, Water		
To Eng. No. F243297	# .8	34.25
For Oversize Fan	# .8	24.40
F243298-	# .8	29.25
For Oversize Fan	# .8	30.35
(# exc. w/Radiator removed .5)		
2 Thermostat	.4	7.88
3 Outlet, Water By-Pass	.4	5.23
4 Housing, Water Outlet		
To Eng. No. F243297	.4	4.18
For Oversize Fan	.3	2.63
F243298-	.4	6.10
5 Hose, Water Pump By-Pass		1.80


ELECTRICAL - ENGINE

TYPICAL

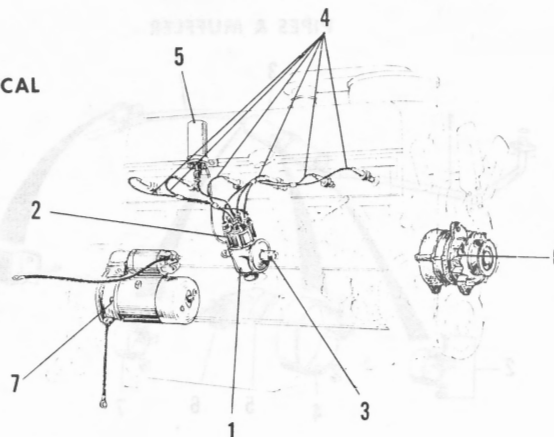

1 Distributor Assy.		
To 12-68	# .5	42.08
1-69-	# .5	39.94
(# Does not include set timing)		
2 Cap, Distributor	.3	3.63
3 Advance, Vacuum	.4	8.85
4 Cable Set, Ignition	.4	9.88
5 Coil, Ignition	.3	7.75
6 Alternator Assy.		
To Eng. No. F243297 (360 w)	.6	98.62
F243298- (420 w)	.6	122.02
Alternate (480 w)	.6	84.63
Regulator, Voltage	# .3	15.43
(# Does not include adjust)		
7 Starter Assy.		
To Eng. No. F243297	.5	57.75
F243298-	.5	82.19

ENGINE

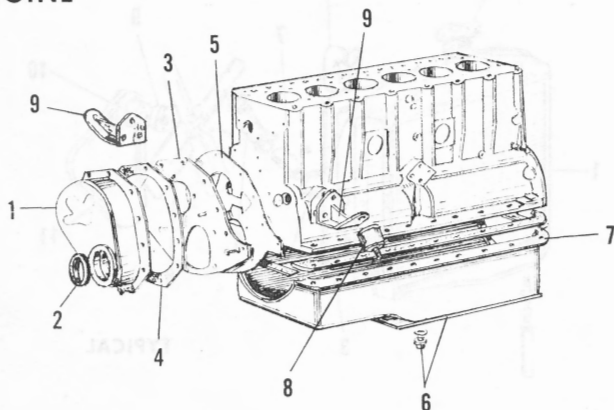


1 Cover, Front Timing	# 1.7	6.10
(# exc. w/Radiator removed 1.2)		
2 Seal, Timing Cover		1.60
3 Plate, Front End		11.08
4 Gasket, Timing Cover		.95
5 Front Plate		.55
6 Pan, Oil (w/Plug) To 10-69	2.1	31.98
11-69-	2.1	18.55
7 Gasket, Set, Oil Pan		
To 2-69		1.83
3-69- (1 piece)		4.98
8 Insulator, Engine Front (2)	.8	5.60
9 Bracket, Eng. Front Insul.	# 1.0	4.03
(# exc. w/Insulator removed .2)		
Insulator, Rear Engine*	.9	.85
Bracket, Eng. Rear Insul.*	.9	7.20
(*Not illustrated)		

ELECTRICAL - BODY

HEADLAMP

AIM LAMPS .4
R&R HEADLAMP PARTS
DOES NOT INCL. AIM

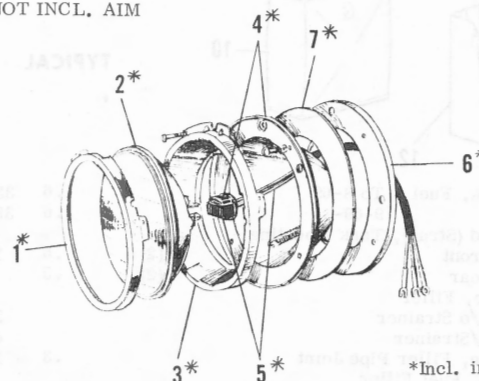

Headlamp Assy.	(2)	.4	14.83
(* Less sealed beam)			
1 Ring, Retainer	(2)	.2	1.25
2 Sealed Beam (USA Mfr.)		.2	3.26
3 Ring, Beam Mounting			1.80
w/Coarse (Std.) Thread			1.98
4 Housing, Lamp (w/Socket)	.6		6.50
5 Socket & Cable			.85
6 Ring, Housing Mounting			.73
7 Gasket, Mounting			.55

*Incl. in Assy.

Cont'd.

SOFTOP & HARDTOP


TOYOTA

10-3

LAND CRUISER FJ40L SERIES

ELECTRICAL - BODY, Cont'd.


PARKING LAMP

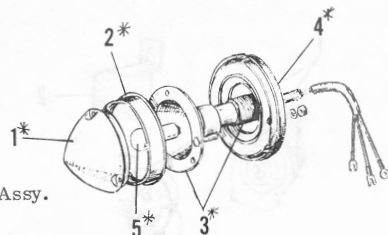

*Incl. in Assy.

Lamp Assy.	(2)	.3	4.28
1 Lens		.2	1.75
2 Rim			1.18
3 Body w/Socket & Cable			2.08
4 Gasket, Mounting			.45
5 Bulb (67)			.28


FRONT TURN SIGNAL LAMP (TO NOV., 1968)

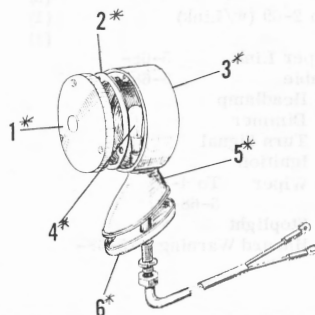

*Incl. in Assy.

Lamp Assy.	(2)	.3	8.60
1 Lens		.2	1.48
2 Gasket, Lens			.23
3 Body w/Cable			5.35
4 Bulb (67)			.28
5 Bracket, Lamp Mtg.			.65
6 Gasket, Mounting			.08

(FROM DEC., 1968)

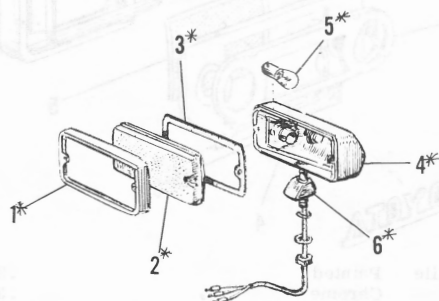

*Incl. in Assy.


Lamp Assy.	(2)	.3	13.80
1 Rim			1.60
2 Lens		.2	1.00
3 Gasket, Lens			.25
4 Body w/Socket & Cable*			
5 Bulb (67)			.28
6 Stopper, Lamp Set			.73

(* Not serviced separately - use assy.)

Cont'd.

ELECTRICAL - BODY, Cont'd.

FRONT SIDE MARKER LAMP (FROM OCT., 1969)

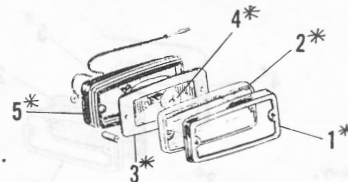

*Incl. in Assy.

Lamp Assy.		.2	6.10
1 Rim			1.00
2 Lens			1.05
3 Body w/Socket & Cable*			
4 Bulb (1895)			.31
5 Gasket, Mounting			.48


(* Not serviced separately - use assy.)

FRONT SIDE REFLECTOR



1 Reflector Assy.	(2)	.2	2.08
-------------------	-----	----	------


REAR COMBINATION LAMP (TO NOV., 1968)

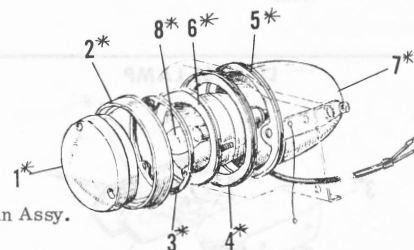

*Incl. in Assy.

Lamp Assy.	(2)	.3	6.00
1 Lens		.2	.80
2 Rim			1.60
3 Gasket, Lens			.33
4 Body			.55
5 Housing			
6 Body w/Socket & Cable			1.73
7 Housing (Protector), Mtg.			2.83
8 Bulb (1034)			.58

(FROM DEC., 1968)

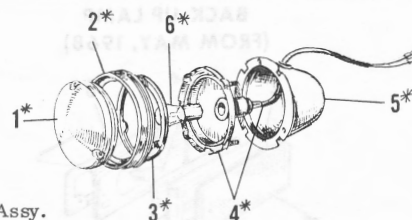

*Incl. in Assy.

Lamp Assy.	(2)	.3	7.20
1 Lens		.2	1.18
2 Rim			1.60
3 Gasket, Lens			.25
4 Body w/Socket & Cable*			
5 Cover, Lamp			2.78
6 Bulb (1034)			.58

(* Not serviced separately - use assy.)

Cont'd.

LAND CRUISER FJ40L SERIES


10-3

TOYOTA

SOFTOP & HARDTOP

ELECTRICAL - BODY, Cont'd.

REAR SIDE MARKER LAMP

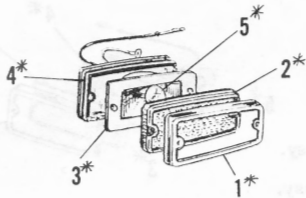

*Incl. in Assy.

Lamp Assy.	.2	6.10
1 Rim		1.00
2 Lens	.2	1.18
3 Body w/Socket & Cable*		-
4 Gasket, Mounting		.48
5 Bulb (1895)		.31


(* Not serviced separately - use assy.)

REAR REFLECTOR (SIDE OR REAR)




1 Reflector Assy., Side	To 9-68	.2	1.58
	10-68-	.2	3.58
Rear			3.58

LICENSE LAMP

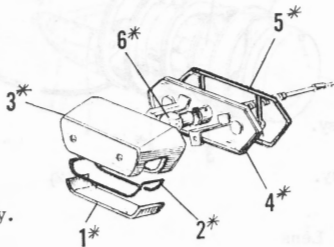

*Incl. in Assy.

Lamp Assy.	.2	4.28
1 Lens		.25
2 Gasket, Lens		.25
3 Cover, Lamp		1.68
4 Body w/Socket & Cable		1.48
5 Gasket, Body		.30
6 Bulb (67)		.28

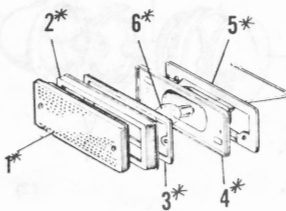BACK-UP LAMP
(FROM MAY, 1968)


*Incl. in Assy.

Lamp Assy.	(1)	.3	4.28
1 Lens		.2	.80
2 Rim			.65
3 Gasket, Lens			.18
4 Body w/Socket & Cable - Not Serviced Separately			.23
5 Gasket, Mounting			.42
6 Bulb (1073)			

Cont'd.

ELECTRICAL - BODY, Cont'd.

MISCELLANEOUS

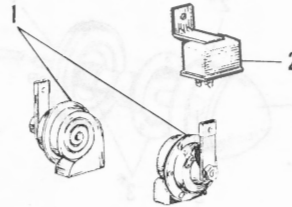


TYPICAL

1 Horn, Shell	Low or High	.2	10.13
Trumpet	Low or High	.2	4.90
2 Relay, Horn		.2	1.33
Blade, Windshield Wiper			
To 4-68			.40
5-68-			2.23
Arm, Wiper Blade	To 4-68	.2	1.20
	5-68-	.2	3.85
Motor, Windshield Wiper			
To 4-68	(2)	.5	12.65
5-68 To 2-69 (w/Link)	(1)	.5	40.23
3-69-	(1)	.5	50.69
Pivot, Wiper Link	5-68-	1.1	18.70
Rod or Cable	5-68-		17.88
Switches, Headlamp		.3	3.33
Dimmer			3.65
Turn Signal		.4	10.98
Ignition			5.38
Wiper	To 4-68		1.33
	5-68-		2.78
Stoplight		.3	1.88
Hazard Warning	5-68-	.3	4.10

BODY - FRONT

GRILLE & FRONT PANELS

REFINISH GRILLE	.7
GRILLE SHELL	1.0

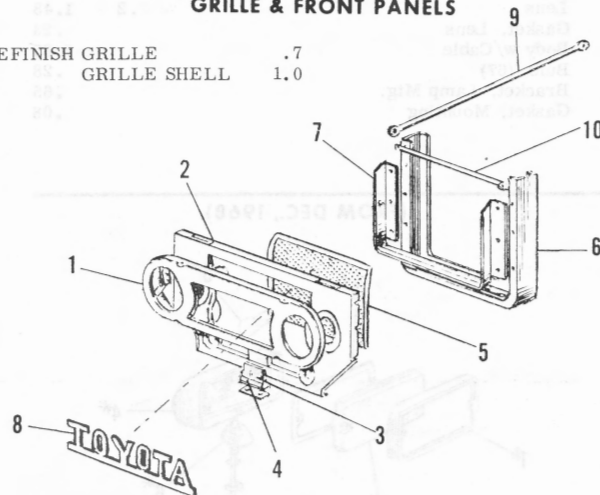

1 Grille	Painted	.3	18.73
	Chrome	.3	22.75
2 Cover, Radiator Panel	#	1.2	29.63
(# w/Grille removed .9, includes R&R headlamp assys. w/one fender removed .6)			
3 Hinge, Cover			2.93
4 Bracket, Cover Hinge			1.60
5 Screen or Ornament	#	.2	16.90
(# w/Rad. panel cover removed.)			
6 Support, Radiator	#	.5	13.83
(# w/Radiator removed.)			
7 Plate, Radiator Shroud		.4	2.28
8 Nameplate, Grille "Toyota"			3.80
9 Rod, Radiator Brace			1.43
10 Bar, Radiator Support			2.20

Cont'd.

SOFTOP & HARDTOP

TOYOTA


10-3

LAND CRUISER FJ40L SERIES

BODY - FRONT, Cont'd.

HOOD & FRONT FENDER

REFINISH HOOD 2.2
FENDER 1.4
SHROUD PANEL 1.0

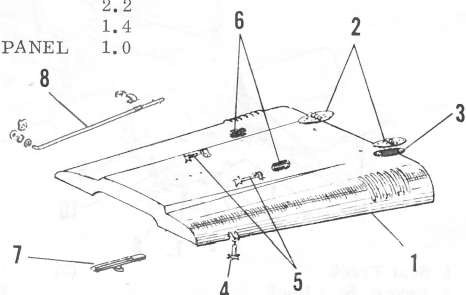

TOYOTA
Land Cruiser


- 1 Panel, Hood
To Frame No. FJ40-36363
w/o Windshield Washers 1.0 86.33
w/Windshield Washers 1.2 -
FJ40-36364-
w/o Windshield Washer 1.0 90.32
w/Windshield Washer 1.2 112.06
- 2 Hinge, Hood (2) # .3 2.93
(# exc. w/Hood removed .2)
- 3 Pad, Hinge (2) .45
- 4 Catch, Hood Side (2) .2 2.08
- 5 Fastener, Windshield Hold-down 1.33
- 6 Bumper or Block, Hood to W/Shield 1.80
- 7 Ornament, Hood Front .2 9.15
- 8 Stay, Hood Up Position .2 1.75
- 9 Panel, Hood Side
To 4-68 .5 9.90
5-68 To 9-69 .5 7.33
10-69- .5 10.90
- 10 Spacer, Side Panel Rear (2) .25
- 11 Nameplate "Toyota Land Cruiser" .2 4.43
- 12 Fender Assy., Front* R.H. 1.0 46.39
L.H. 1.0 46.39
- (* Includes items 13 & 14)
- 13 Apron, Fender Inner - Not serviced, use item 12.
- 14 Stay, Fender - Not serviced, use item 12.

MAIN CAB, Cont'd.

COWL , Cont'd.

- 1 Cowl Assy.
To 4-68 Softop #30.0 105.85
Hardtop #32.0 178.48
5-68- Softop #30.0 209.80
Hardtop #32.0 209.80
(# Incl. R&I engine, front fenders, hood, W/S frame, instruments, & wiring.)
- 2 Cover, Cowl Side Air Vent # 2.5 8.23
(# Time is w/door, fender & step removed.)
- Step Assy., Side
- 3 To 9-69* .5 13.10
- 4 10-69- .5 9.78
(* Includes items 5 thru 7)
- 5 Base, Side Step To 9-69 # .2 7.03
(# w/Step panel removed.)
- 6 Mat, Side Step
To Frame No. FJ40-29999 .3 1.68
FJ40-30000 To 9-69 .3 1.80
- 7 Retainer, Step Mat
To Frame No. FJ40-29999 1.28
FJ40-30000 To 9-69 3.85

COWL VENTILATOR

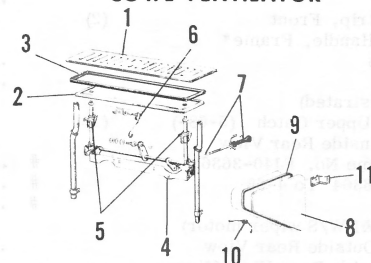


- Plate, Front Vent* .4 11.48
- Moulding, Vent Plate* 1.53
- Net or Screen, Front Vent* 1.20
- Arm, Front Vent* .18
- (* To Frame No. FJ40-36222; Not illustrated)
- 1 Grille or Louver, Top Vent .2 1.13
- 2 Damper, Top Vent 1.00
- 3 Weatherstrip, Top Vent Grille 2.08
- 4 Link Assy., Vent Damper
To 4-68 5.55
5-68- 11.48
- 5 Bracket, Vent Damper (2) 1.35
- 6 Spring, Torsion .15
- 7 Control, Top Vent
To 4-68 (Wire) 2.13
5-68- (Rod) 2.93
- 8 Cover, Side Vent .2 1.83
- 9 Gasket, Vent Cover .93
- 10 Spring, Torsion .15
- 11 Hinge, Side Vent Cover 2.38

MAIN CAB


REFINISH SIDE COWL 1.2
TOP COWL 1.0
INNER PANELS ARE w/OUTER
PANELS REMOVED.

COWL

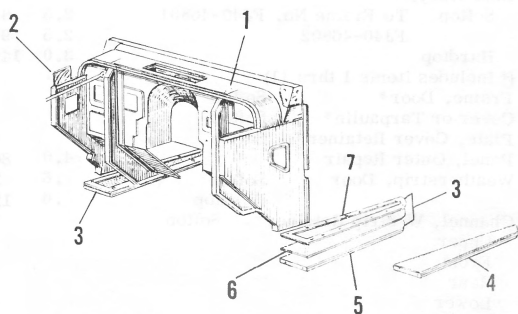

Cont'd.

WINDSHIELD & MIRRORS

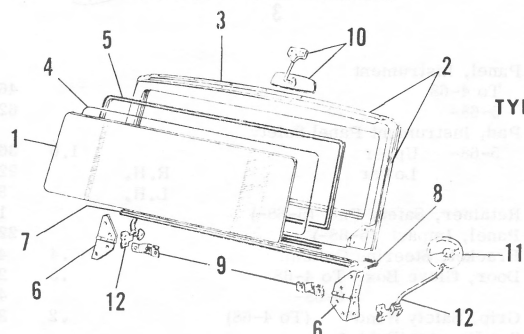

TYPICAL

- 1 Glass, Windshield
To Frame No. FJ40-36222 1.2 33.43
FJ40-36223- 1.2 39.02

Cont'd.

FOREIGN COLLISION ESTIMATOR GUIDE

LAND CRUISER FJ40L SERIES

10-3

TOYOTA


SOFTOP & HARDTOP

MAIN CAB, Cont'd.

WINDSHIELD & MIRRORS, Cont'd.

2	Frame Assy., Windshield		
	Softop To Frame No. FJ40-36222	3.2	54.08
	FJ40-36223 To 4-68	3.2	49.16
	5-68-	3.2	68.82
	Hardtop To Frame No. FJ40-36363	3.2	37.68
	FJ40-36364 To 4-68	3.2	49.16
	5-68-	3.2	68.82
	Frame, Windshield Inner*		-
	3-69- (w/Hinged Frame)		-
	(* Not illustrated)		
	Hinge, Windshield Opening (3-69-)	.3	5.30
3	Rail, Frame Upper		
	Softop FJ40-36223 To 55407	5.23	
	FJ40-55408-	8.20	
	Weatherstrip, Glass		
4	Outer		2.08
5	Inner		10.35
6	Hinge, Windshield Frame	.3	5.55
7	Strip, Frame Spacer		
	To Frame No. FJ40-36222	.2	12.95
	FJ40-36223 To 4-68	.2	7.65
	5-68-	.2	12.95
8	Weatherstrip, Front	(2)	.50
	Catch or Handle, Frame*		
	To 4-68	.2	8.15
	5-68-	.2	2.45
	(* Not illustrated)		
9	Bracket, Upper Catch (5-68-)	(2)	2.45
10	Mirror, Inside Rear View		
	To Frame No. FJ40-36363	# .5	3.65
	FJ40-36364 To 4-68	# .5	4.65
	5-68-	# .5	10.83
	(# Incl. R&I W/S wiper motor)		
11	Mirror, Outside Rear View	.2	4.88
12	Arm, Outside Rear View Mirror		5.95


INSTRUMENT PANEL

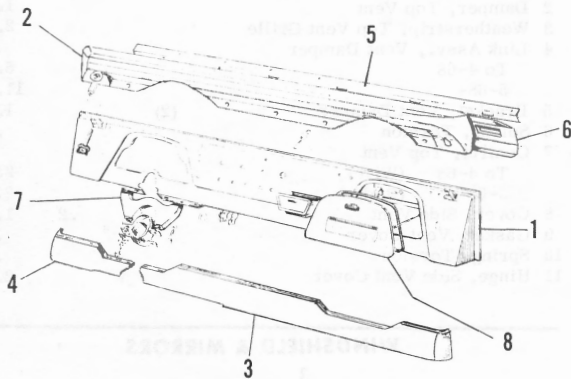

1	Panel, Instrument		
	To 4-68		46.10
	5-68-		62.06
	Pad, Instrument Panel Safety		
2	5-68- Upper	1.0	36.08
3	Lower	R.H.	22.98
4		L.H.	9.38
5	Retainer, Safety Pad (5-68-)		1.65
6	Panel, Impact (5-68-)		22.98
7	Bracket, Steering Column	.4	4.25
8	Door, Glove Box To 4-68	.3	2.15
	5-68-		4.95
	Grip, Safety Hand* (To 4-68)	.2	3.38
	Sun Visor w/Brkt. *		
	To 4-68	.2	4.75
	5-68-	.2	8.13
	(* Not illustrated)		

Cont'd.

MAIN CAB, Cont'd.

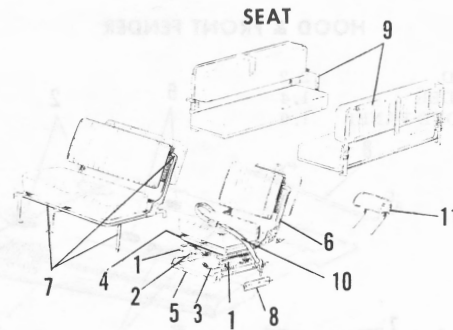

1	Seat Track	(2)	#	1.03
2	Lever, Seat Lock		#	.50
3	Handle, Seat Adjusting		#	3.70
	(# O/H seat track one seat .8, includes R&R)			
	Frame, Front Seat			
	Drivers Side			
4	Cushion Upper	To 4-68	.6	57.54
	5-68-*		.6	-
5	Lower	All	.6	19.45
6	Backrest	To 4-68		37.23
	5-68-*			-
7	Passenger Side	To 4-68	.8	48.55
	5-68-*		.8	-
	(* Not serviced separately - use seat assy.)			
8	Shield, Cushion Side			.78
9	Frame, Rear Side Seat			
	To 4-68	R.H.	.5	58.67
		L.H.	.5	42.71
	5-68- Not serviced separately - use seat assy.			
10	Seat Belt, Lap Front		.3	13.65
11	Headrest, Front Seat	10-69-	.3	25.03

FRONT DOOR

REFINISH

DOOR OUTER	2.2
ADD FOR INNER	.8
R&I DOOR	.5

ASSEMBLY & PANELS

1	Frame, Door*	Softop	-
2	Cover or Tarpaulin*	Softop	-
3	Plate, Cover Retainer*	Softop	-
4	Panel, Outer Repair		4.0 86.02
5	Weatherstrip, Door	Softop (2)	.6 2.75
6	Channel, W/Strip Retainer*	Hardtop	.6 12.03
7	Upper		-
8	Front		-
9	Rear		-
10	Lower		-
	(* No longer serviced separately, use door assy.)		

Cont'd.

SOFTOP & HARDTOP

TOYOTA

10-3


LAND CRUISER FJ40L SERIES

FRONT DOOR, Cont'd.

ASSEMBLY & PANELS, Cont'd.

11 Hinge, Female	Softop	.4	1.90
12 Male	Softop	(4) .3	4.33
13 Hinge Assy.	Hardtop	(2) #	6.33
(# Upper .4, lower .3, both .5)			

HARDWARE

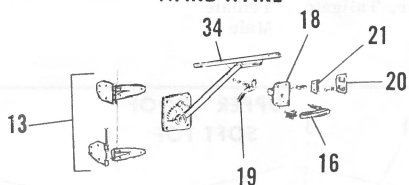

14 Strap, Check Handle, Outside	(2)	.3	1.20
15 Softop To 2-69		.3	2.93
3-69-		.3	-
16 Hardtop Handle, Inside		.3	3.30
17 Softop To 2-69		.2	1.50
3-69-		-	-
18 Hardtop (w/Lock)		.4	8.75
19 (Handle Only)		.2	1.28
20 Plate, Striker	(2)	.2	.78
21 Stop, Door Down	(2)	.2	3.08

VENT GLASS & PARTS

Glass, Vent			
22 Softop To Frame FJ40-46801		.4	4.68
FJ40-46802-		.4	6.58
23 Hardtop Weatherstrip, Vent Glass		.4	3.08
24 Softop			3.95
25 Hardtop			1.58
26 Frame, Vent Glass	Hardtop	.8	5.08
27 Weatherstrip, Vent Frame			4.33
Hardtop			4.33
28 Handle, Vent	Hardtop	.2	2.43
29 Shaft, Vent Handle			.80
Hardtop	(2)		.80

DOOR GLASS & PARTS


Glass, Door			
30 Softop To Frame No. FJ40-46801	(2)	.7	7.20
FJ40-46802-	(2)	.7	11.68
31 Hardtop	(2)	.8	7.83
32 Plate, Glass Holder	Softop		.73
Channel, Glass Lower			
33 Softop	(2)		.50
34 Hardtop			.93
Channel, Glass Run			-
35 Softop*			-
36 Hardtop Front or Rear	(4)		1.65
37 Upper	(2)		.95
38 Pad or Run, Channel*	Softop		-
(* No longer serviced separately - use door assy.)			
Weatherstrip, Glass Belt Inner			
39 Softop To 2-69	#	.2	1.73
All 3-69 To 9-69	#	.2	2.05
Softop 10-69-	#	.2	1.73
Hardtop 10-69-	#	.2	2.08
Weatherstrip, Glass Belt Outer			
41 Hardtop	(2)#	.2	1.10
(# Time is w/glass removed.)			
42 Retainer, Outer Belt W/Strip			.18
Hardtop			

BODY - REAR

LOWER & SIDE

REFINISH

REAR PANEL ASSY. COMPLETE	8.0
ADD FOR INTERIOR	2.0
QUARTER SIDE PANEL OUTER	2.5
ADD FOR INTERIOR	0.8
SILL OUTER PLATE	1.0

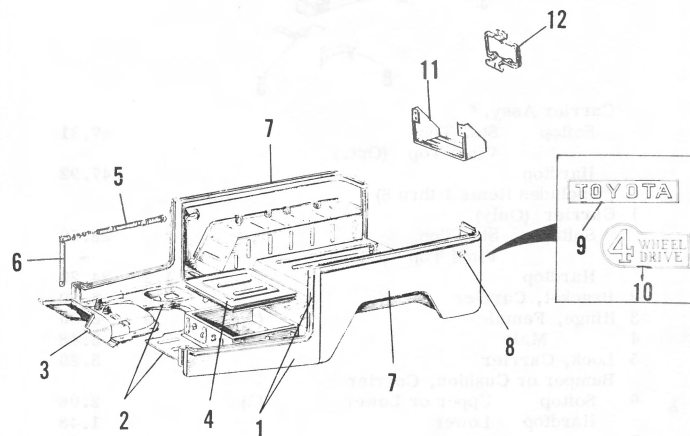

Body Assy., Front* # 8.0 150.68
 (#Time is w/front body cowl assy. or rear body assy. rem.)

(* Includes items 1 & 2)

1 Panel Assy., Lock Pillar & Rocker # 4.5 24.98
 (# exc. w/Quarter panel removed 3.0)

2 Floor Assy., Front* -
 (* No longer serviced separately - use front body assy.)

3 Cover Transmission 23.78

4 Cover, Tool Box 8.15

5 Strap, Safety (2) 6.30

6 Bracket, Safety Strap -

Body Assy., Rear*

Softop To 9-69 14.0 571.88

10-69- exc. 14.0 -

** 14.0 -

Hardtop To 9-69 #16.0 566.56

10-69- exc. #16.0 -

** #16.0 -

(# exc. w/Top assy. removed 14.0)

(* Includes items 7)

(** Case storage system)

7 Panel, Rear Side

Softop To 9-68 R.H. 9.0 57.14

L.H. 9.0 58.99

10-68 To 9-69 R.H. 9.0 78.96

L.H. 9.0 -

10-69- exc. R.H. 9.0 -

L.H. 9.0 78.96

* R.H. 9.0 -

Hardtop To 9-68 R.H. #10.0 54.68

L.H. #10.0 53.15

10-68 To 9-69 R.H. #10.0 78.96

L.H. #10.0 78.96

10-69- exc. #10.0 78.96

* R.H. #10.0 74.34

(# Time includes loosen top panel assy. as necessary)

(* Case storage system)

8 Reflector, Rear Side - See Electrical-Body Section.

9 Nameplate "Toyota" .2 4.05

10 Ornament "4 Wheel Drive" 3.38

11 Step, Rear Hardtop

Std. .4 6.23

For Trailer (Opt.) 9.40

12 Bracket, Rear License Plate .2 5.63

Cont'd.

SOFTOP & HARDTOP

TOYOTA 10-3

LAND CRUISER FJ40L SERIES

BODY - REAR, Cont'd.

UPPER - ROOF, Cont'd.
HARDTOP, Cont'd.


Weatherstrip, Roof Panel				
5	Front Center			5.35
6	Front Side	(2)		.85
7	Side & Rear	(2)		9.63
8	Panel, Rear Upper Side			
	To Frame No. FJ40-36363	# 3.0	102.61	
	FJ40-36364-	# 3.0	114.12	
(# Time includes R&R glass w/roof panel rem. 2.0)				
Weatherstrip, Side Panel				
9	Side	(2)		1.43
10	Side Rear			.93
Glass, Side Panel				
11	Side To Frame No. FJ40-36363	(2)	1.0	6.65
	FJ40-36364-	(2)	1.0	11.00
12	Rear Corner		.5	5.45
Weatherstrip, Side Panel Glass				
13	Outer Side	(2)		3.10
14	Outer Rear Corner	(2)		4.03
15	Inner Side	(2)		1.60
16	Inner Rear Corner			.93

BACK DOOR

TO FRAME NO. FJ40 - 36363

HARDTOP

REFINISH UPPER DOOR	1.2
LOWER DOOR	1.0
ADD FOR INTERIOR	.5

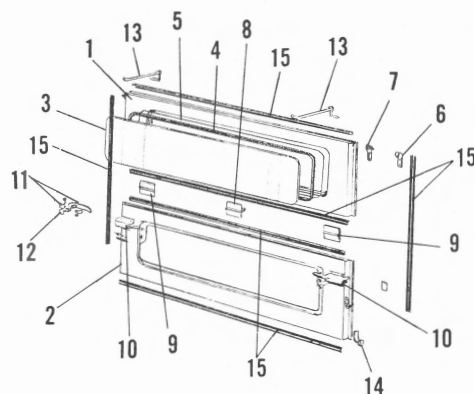


Door Assy.*			
(* Includes items 1 thru 5, 7 thru 12, 14 & 15)			
1	Panel, Upper	2.0	37.30
2	Lower	.8	35.95
3	Glass, Upper Panel	1.0	4.83
4	Weatherstrip, Glass Outer		2.70
5	Inner		.40
Hinge, Upper Panel To Roof			
6	Female	(2)	.5
7	Male	.4	2.05
Hinge, Upper to Lower Panels			
8	Center	(1)	.3
9	Sides	(2)	.3
10	Lock w/Handle, Inside		.3
11	Handle, Lock Outer*	.4	7.73
(* Includes item 12)			
12	Bracket, Outer Handle	(2)	.50
13	Stay, Up Position	.2	1.80
14	Roller, Door	(2)	2.00
15	Weatherstrip, Door	(4)	.3

BODY - REAR, Cont'd.

BACK DOOR, Cont'd.
FROM FRAME NO. FJ40 - 36364
HARDTOP


SHEET METAL

REFINISH DOOR	1.5
ADD FOR INTERIOR	.7

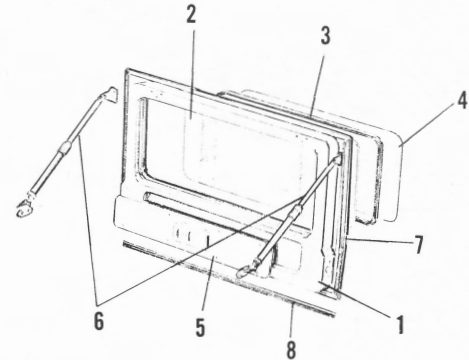

1	Shell, Door	2.0	97.08
2	Glass, Door	1.2	9.38
3	Weatherstrip, Glass Outer		3.25
4	Inner		1.60
5	Cover, Shell Service Hold		4.73
6	Stay, Up Position		14.88
7	Weatherstrip, Door Upper	.3	5.73
8	Lower	.3	1.33

HARDWARE

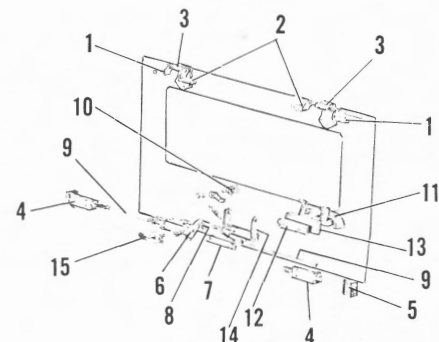

1	Hinge, Door Female Outer		.70
2	Inner		.70
3	Male		.3
4	Lock, Side	(2)	.4
5	Plate, Striker	(2)	.2
6	Link, Lock		.3
7	Base, Lock Link		.48
Rod or Wire, Lock Control			
8	Center	.2	.23
9	Sides		.30
10	Cylinder & Sleeve	.3	4.10
11	Handle, Outside	.4	6.03
12	Plate, Outside Handle		.50
13	Pad, Outside Handle Plate		.48
14	Stay or Bracket, Outside Handle		.78
15	Handle, Inside	.2	4.80

Cont'd.

NOTE(S)